

Koolzap®

Steps to Change a Cabin Air Filter

1. **Open the glove box (1)**, and slide off the damper.
2. Push in each side of the glove box to **disconnect the claws (2)**.
3. **Remove the filter case or cover (3)** by holding both sides to release tabs.
4. **Remove the air filter from the housing (4)**.
5. Reinstall in reverse order.
6. Close the glove box and pat yourself on the back!

