

Koolzap®

Steps to Change a Coolant Reservoir Bottle

1. **Disconnect the negative battery cable.**
2. **Drain the cooling system.**
3. **Remove the bolts** securing the reservoir to the engine compartment
4. **Remove hose clamps and hoses** from radiator and radiator filler neck.
5. **Remove the reservoir/overflow tank (4) from engine compartment (1).** For some vehicles you may have to remove reservoir from the fan shroud (3) and/or radiator support panel (2).
6. **Reinstall in reverse order.**
7. Make sure all hoses and clamps are reattached.
8. Reconnect battery cable and pat yourself on the back!

