

Koolzap®

Steps to Change a Bumper Cover (Front)

1. **Open the hood** of the vehicle and **remove the negative battery cable from the battery**.
2. **Look along the front center area** where the hood closes. **There should be a row of screws that needs to be removed**. Some models may have a protective plastic shield over the radiator that also needs to be removed to get to the bumper screws.
3. **Look under the bumper** on the vehicle. There will be various screws and clips holding the bumper on. Working from the center out to each end, **remove the screws and clips**. You may have to remove the plastic undercar shield to access screws.
4. If a bumper is fastened under a wheel well, it might be necessary to **remove the overlapping wheel well cover**, and then **remove the screw that holds the bumper**.
5. At the corner of each bumper there should be a single bolt. By removing these bolts, the bumper should now be loose and can be removed. If the bumper does not come off, check all around for a screw or clip that might have been missed.
6. Install in reverse order.
7. Close the hood and pat yourself on the back!

