

Koolzap®

Steps to Change a Headlight

1. **Open and prop your vehicle's hood.**
2. **Remove the tabs or screws** on top, side, and bottom of the housing.
3. **Remove the power connector (3) (4)** from the back of the headlight. This may require a slight turn to get it loose.
4. **Twist the bulb socket(s) (2) counter clockwise** to remove the bulbs from the assembly.
5. Some cars have a **clip that holds the bulb in place (5)**. Press down on this clip to release the light bulb.
6. **Grasp the housing (1) and pull the old headlight out.** This step may require a little wiggling to get it loose.
7. **Reinstall in reverse order.**
8. **Turn on your headlights** to ensure the bulb and connection are working.
9. Close the hood and pat yourself on the back!

