

# Koolzap®

## Steps to Change a Heater Core

---

1. **Disconnect the negative battery cable.**
2. **Drain the radiator.**
3. **Remove the glove box door** or any related parts that in front of the heater core.
4. **Remove heater tubes and/or hoses** from the heater core.
5. **Remove the plenum chamber, screws, and the heater core cover.**
6. **Pull heater core out.**
7. **Reinstall in reverse order.**
8. Reconnect the battery cable and pat yourself on the back!

