



Steps to Change a Hood Panel

1. Release the hood latch and open the hood.
2. Disconnect the windshield washer tubing.
3. **Remove the hood insulator, washer tubing, and emblem if applicable.**
4. If necessary, install a hood prop and **remove the hood struts.**
5. **Remove the bolts** holding the hood hinge on one side of the vehicle. Have an assistant support the hood while you **remove the bolts on the other side.**
6. **Remove the hood.**
7. Reinstall in reverse order.
8. Close the hood and pat yourself on the back!

