

Koolzap®

Steps to Change a Bumper Cover (Rear)

1. **Open the trunk** of the vehicle and **remove the plastic trim** that covers the bolts from inside the trunk. **Remove the screws or the bolts.** (Skip this step if there is no screws holding bumper from inside the trunk).
2. **Look under the bumper** on the vehicle. There will be various screws and clips holding the bumper on. Working from the center out to each end, **remove the screws and clips.** You may have to remove the plastic undercar shield to access screws.
3. If a bumper is fastened under a wheel well, it might be necessary to **remove the overlapping wheel well cover**, and then **remove the screw that holds the bumper.**
4. At the corner of each bumper there should be a slide bracket holding bumper on each end. **Remove bolts and/or clips to release bumper** off slide bracket. The bumper should now be loose and can be removed.
5. Install in reverse order.
6. Close the trunk and pat yourself on the back!

