



Steps to Change a Mirror Glass

1. **Detach the damaged outer mirror glass by pulling it away from the housing.** The glass is attached by small pins on the back. This step may require a little wiggling to get it loose.
2. **Remove the pins** from the mirror glass holder inside the housing.
3. For heated mirrors **disconnect the connector/plug.** Skip step if installing a non-heated mirror.
4. **Connect the heater connector and the pins to the new mirror glass.**
5. **Align pins (A & B) with pin holes (PIN A & PIN B), then press on glass to install.** Mirror glass should snap in place with little pressure.
6. You did it. Pat yourself on the back!

