

Koolzap®

Steps to Change a Starter Motor

1. Turn off the ignition and open the hood.
2. Remove the negative battery cable from the battery.
3. Remove the positive cable (the large cable that runs to the battery) from the starter.
4. Disconnect all the bolts that hold the starter to the block, using a ratchet.
5. Remove any other supporting brackets holding the starter in place.
6. Remove all the shield and bolts holding the starter. Don't force any bolts that are very tight and are difficult to remove. Rather, use a lubricant or grease to help you loosen the bolt.
7. Remove the starter from the car.
8. Reinstall in reverse order.
9. Close the hood and pat yourself on the back!

