

Koolzap®

Steps to Change a Tail Light Assembly

1. **Open the trunk and locate the back of the taillight assembly.**
2. **Remove any cover or trim** that block access to the back of the taillight.
3. **Disconnect the wiring harness** from the back of the taillight. This may require a slight turn to get it loose.
4. **Twist the bulb socket(s) counter clockwise** to remove the bulbs from the assembly.
5. **Remove the tabs or mounting screws** on top, side, and bottom of the housing. If applicable, remove any mounting screws located on the outside of the assembly.
6. **Push the taillight assembly out from behind** away from the vehicle.
7. **Reinstall in reverse order.**
8. **Test the assembly** to ensure the bulbs and connections are working.
9. Close the trunk and pat yourself on the back!

