

Steps to Change an Undercar Splash Shield

- 1. Secure the vehicle on level surface.
- 2. Use a jack to raise the vehicle.
- 3. Secure the vehicle with jack stands on both sides for safety before starting any work.
- 4. **Remove the screws or the fastener tabs** and any retainer holding the old unit in place.
- 5. Remove the old or damaged splash shield by pulling it away from the vehicle.
- 6. Reinstall in reverse order.
- 7. Lower the jack and pat yourself on the back!

