



Steps to Change a Window Regulator

1. **Remove door trim panel.**
2. **Remove water dam.**
3. **Remove nuts attaching door glass to window regulator.**
4. **Remove glass from door** or move glass to full up position and secure it with tape.
5. **Disengage power window motor wire connector** from door harness if installing power regulator. Skip step if installing manual regulator.
6. **Remove bolts attaching window regulator to inner door panel.** Separate window regulator from door.
7. Reinstall in reverse order.
8. Close the door and pat yourself on the back!

